


Setting favorite positions

Once the upper and lower limits are set, the motor can store two favorite positions. After setting the favorite positions, double press **UP** or **DOWN** button to send the motor to the favorite position 1 or 2. If you also use the Neo Smart Blinds Blue app to control your blinds, please read the related topic in the bottom of this page first.


Setting favorite position 1

1. Use **UP** and **DOWN** buttons to go to the desired favorite position 1.

2. Double press the **SET** button, then double press **UP** button. This entire sequence must be completed within 10 seconds.

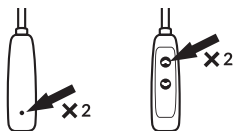

 
3. The motor will move up and down to confirm that the favorite position 1 was saved.




Setting favorite position 2

1. Use **UP** and **DOWN** buttons to go to the desired favorite position 2.

2. Double press the **SET** button, then double press **DOWN** button. This entire sequence must be completed within 10 seconds.

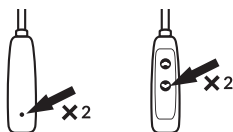

 3. The motor will move up and down to confirm that the favorite position 2 was saved.



Favorite position in the Neo Smart Blinds Blue app

None of the favorite positions set via wand are accessible to the Neo Smart Blinds Blue Link app, however you can easily set up a favorite position in the app.

Deleting favorite position

Delete a favourite position by setting it at the same position.

Go to the desired favorite position to delete. Then, set the same favorite position, using the instructions in the left page. The motor will move up and down to confirm the favorite position was deleted.


Neo Wand Motor specifications

Electrical parameters: 8.4V DC built-in rechargeable lithium battery

Power sources: 5V/1A Micro-USB charger or 2W/11V solar panel

Operational parameters: 1.1Nm, 30rpm

Compatible product to automate your home

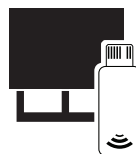

Blue Link

Local control of your motorized blinds using your phone or tablet. Set schedules to automate your home. No need to connect to your Wi-fi or router.

For more information about our motors, remote controls and compatible products please visit our website. To buy one of these products, please contact your dealer.

neosmartblinds.com

In case of problem or doubt, please contact your dealer.

NEO WAND MOTOR

All TM-WB Models
Version 4.0




Models
WAND-21
WAND-39
WAND-51

powered by Neo Smart Blinds

ENGLISH

Getting to know your Neo Wand Motor

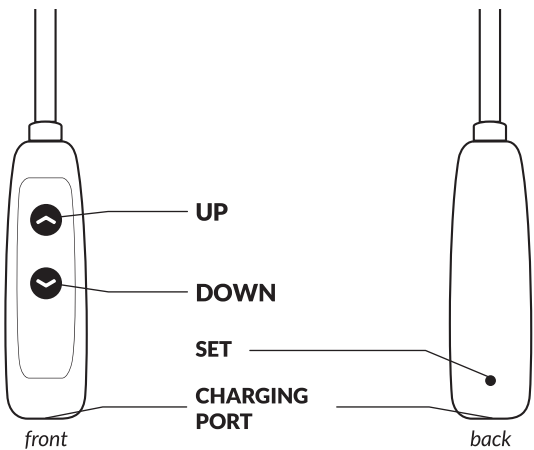

Basic operation

Command	Description	Key Combination
Go -Up	Move all the way to the upper limit. ¹	Hold UP for 1 second
Go-Down	Move all the way to the lower limit. ¹	Hold DOWN for 1 second
Stop	Stop ongoing motion.	Press UP or DOWN
Step-up	Move the motor up a small amount.	Press UP
Step-down	Move the motor down a small amount.	Press DOWN
Go-To-Favorite-1	Move the motor to favorite position 1.	Double press UP
Go-To-Favorite-2	Move the motor to favorite position 2.	Double press DOWN

1 - The motor will stop on button release if the limit is not yet set.
2 - The motor will take no action if the favourite position is not yet set.


Charging the motor

1. Plug the micro-USB cable in the charging port, located in the bottom of the wand.




Reverse direction

1. Hold the **SET** button on the back of wand for 5 seconds. The motor will move up and down to indicate the process has started.

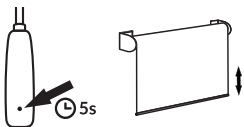

2. Then, hold the **SET** button on the back of wand for 5 seconds again. The motor will move up and down to indicate the blind had its direction reversed.

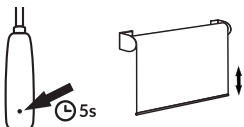


Setting or adjusting limits

The motor's upper and lower rotational limits are set individually.

Upper limit


1. Hold the **SET** button for 5 seconds. The motor will move up and down to indicate the process to set up the upper limit has started.

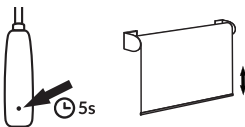

2. Press **UP** to adjust the upper limit.



3. Use **UP** and **DOWN** buttons to go to the desired upper position.

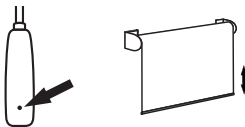


4. Press once **SET** button on the back of the wand. The motor will move up and down to confirm that the new upper limit position has been saved.

Setting or adjusting limits

Lower limit

1. Hold the **SET** button for 5 seconds. The motor will move up and down to indicate the process to set up the lower limit has started.

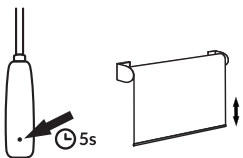


2. Press **DOWN** to adjust the lower limit.



3. Use **UP** and **DOWN** buttons to go to the desired lower position.

4. Press once **SET** button on the back of the wand. The motor will move up and down to confirm that the new lower limit position has been saved.

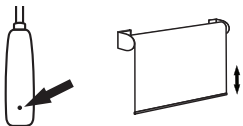

Delete limits and delete favorite positions

Attention: This procedure deletes the upper and lower limits and the favorite positions 1 and 2. A blind without upper and lower limits will only move a small amount when **UP** or **DOWN** is pressed or held.

1. Press the **SET** button on the back of the wand twice. The LED on motor's head will turn on to indicate the process has started.



2. Hold the **SET** button for 5 seconds, until the motor moves up and down.

